


Pilot jednokanałowy PIL – 01DL

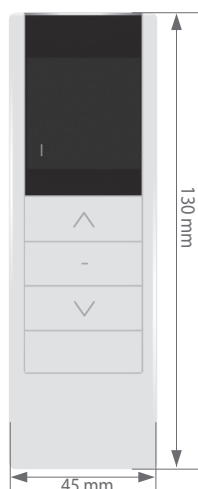


Klawisz „góra”

Klawisz „stop”

Klawisz „dół”

3. PIERWSZE REJESTROWANIE DO STEROWNIKA ST-01R

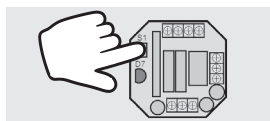

3.1 Naciśnij raz krótko przycisk programowania S1. Poczekaj aż dioda D7 zaświeci się jednokrotnie na zielono.




3.2 W ciągu 5 sekund krótko naciśnij klawisz „góra” na pilocie.




3.3 Sterownik zasygnalizuje rejestrację pilota mrugnięciem diody D7 na czerwono i zielono.

4. DODAWANIE KOLEJNYCH PILOTÓW DO NAPĘDU RADIOWEGO/STEROWNIKA ST-01R/ST-01RL

Gdy dysponujemy już zarejestrowanym pilotem, kolejne piloty rejestrujemy bez wyłączania zasilania. Przy użyciu zarejestrowanego wcześniej pilota należy wprowadzić napęd/sterownik w tryb programowania.

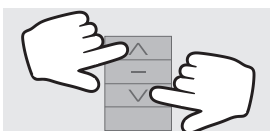


4.1 Naciśnij jednocześnie (krótko) klawisze „góra” i „dół” **wcześniej zarejestrowanego pilota.**



4.2 Napęd wykona ruch w górę i w dół.




4.3 W ciągu 5 sekund krótko naciśnij klawisz „góra” **nowego pilota.**



4.4 Napęd wykona serię krótkich ruchów w górę i w dół potwierdzając rejestrację kolejnego pilota.

5. WYMIANA BATERII

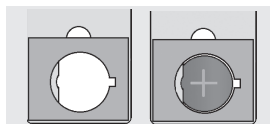

Pilot jest zasilany z baterii 3 V typu CR2430. Aby wymienić baterię trzeba zdjąć pokrywkę na dole pilota i usunąć zużytą baterię. Nową baterię należy umieścić „plusem” do góry.

1. URUCHAMIANIE ROLET

Aby rozpocząć ruch napędu, należy nacisnąć klawisz „góra” (otwieranie) lub klawisz „dół” (zamykanie). Napęd możemy zatrzymać klawiszem „stop” w dowolnym momencie.


2. PIERWSZE REJESTROWANIE DO NAPĘDU RADIOWEGO/ STEROWNIKA ST-01RL



2.1 Podłącz do napędu/sterownika napięcie zasilania 230 VAC.



2.2 W ciągu 10 sekund naciśnij jednocześnie (krótko) klawisze „góra” i „dół” na pilocie.



2.3 Napęd wykona ruch w górę i w dół.



2.4 W ciągu 5 sekund krótko naciśnij klawisz „góra” na pilocie.



2.5 Krótki ruch w górę i w dół potwierdzi prawidłowość rejestracji.


UWAGA: Procedura spowoduje wykasowanie z pamięci napędu/sterownika wszystkich pilotów, jakie wcześniej były zarejestrowane.



Zużytych baterii lub akumulatorów nie wolno wyrzucać razem z odpadami z gospodarstwa domowego. Użytkownik jest zobowiązany przekazać wszystkie zużyte urządzenia elektroniczne i elektryczne do specjalnego punktu zbiórki odpadów w celu ich wtórnego przetworzenia.



One channel remote control PIL-01DL

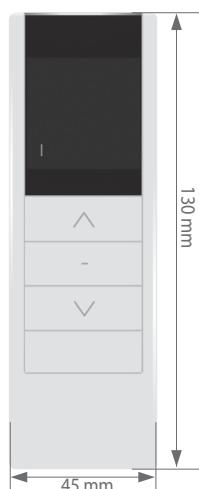

Key $\wedge$ "up"
Key — "stop"
Key $\vee$ "down"

1. ACTIVATING THE BLINDS

To activate the motion of a particular motor, press the key $\wedge$ "up" (open) or the key $\vee$ "down" (close). You can stop the motor with the key — "stop" at any moment.

2. FIRST PROGRAMMING WITH RADIO CONTROLLED MOTORS AND ST-01RL CONTROLLER UNITS

- 230V
- 2.1 Connect 230 VAC power to a particular motor/controller.
- < 10 sec.
- 2.2 In the next 10 seconds after turning on the power, simultaneously short press the keys $\wedge$ "up" and $\vee$ "down" of the remote control.
- 2.3 The motor will execute the movement up and down.
- < 5 sec.
- 2.4 In the next 5 seconds short press the key $\wedge$ "up".
- 2.5 Short movement up and down will confirm proper registration.

NOTICE: This procedure will reset the motor and erase all the previously registered remote controls.

3. PROGRAMMING THE ST-01R CONTROLLER UNIT

- 3.1 Press the programming button S1 – the diode will flash once and will glow permanently.
- < 5 sec.
- 3.2 Next short press the key $\wedge$ "up" of the remote control.
- D7
- 3.3 The controller will signalise the registration of the remote control with the diode flashing green and red.

4. WITH THE USE OF A REGISTERED REMOTE CONTROL

Other remote controls are registered without turning off the power. With the use of a registered remote control enter the programming mode of a motor/controller.

- 4.1 Briefly press simultaneously the keys $\wedge$ "up" and $\vee$ "down" of a **registered remote control**.
- 4.2 The motor will execute the movement up and down.
- < 5 sec.
- 4.3 In the next 5 seconds short press the key $\wedge$ "up" with a **new remote control**.
- 4.4 The motor will execute a series of short movements up and down confirming the registration of another remote control.

5. CHANGING THE BATTERIES

- The remote control is powered by one 3V button cell battery type CR2430. To change the battery, remove the cover at the bottom of the remote control. Replace with a new battery, with the plus (+) symbol facing up.

It is forbidden to place used equipment together with other waste. Dispose of in a specially designated place. The household plays an important role in the waste equipment recycling system. By properly separating waste, including waste equipment and batteries, households ensure that waste equipment does not end up in municipal waste but in a specially designated place and, after recycling, can be used as a raw material for reuse.

Przedsiębiorstwo Informatyczno-Elektroniczne INEL Sp. z o.o., ul. Mostowa 1, 80-778 Gdańsk declares that the pilot described in this manual complies with Directive 2014/53/EU. The full text of the EU Declaration of Conformity is available at the following web address: www.inel.gda.pl.

