

Pilot pięciokanałowy PIL – 05DW



Klawisz „góra”
Klawisz „stop”
Klawisz „dół”
Klawisz „zmiana kanału”

1. URUCHAMIANIE ROLET

Aby rozpocząć ruch napędu, należy nacisnąć klawisz „góra” (otwieranie) lub klawisz „dół” (zamykanie). Napęd możemy zatrzymać klawiszem „stop” w dowolnym momencie. Po około 5 sekundach bezczynności (brak naciśnięcia klawiszy) pilot przechodzi w stan uśpienia (zmniejszonego poboru prądu z baterii).

Pilot standardowo jest w stanie uśpienia, naciśnięcie dowolnego klawisza powoduje wybudzenie i przygotowanie do pracy (wyświetli się numer kanału, pilot nie wykona w tym momencie żadnej innej operacji). Dopiero drugie naciśnięcie klawisza spowoduje wykonanie polecenia.

2. WYBÓR KANAŁU

Wyboru kanału dokonujemy używając klawisza „zmiana kanału”. Można wybrać numer pojedynczego kanału lub wszystkich kanałów jednocześnie. Na kanał wspólnym zaświecą się wszystkie diody jednocześnie.

3. URUCHAMIANIE TRYBU ŻALUZZOWEGO




Przejdzie w tryb żaluzjowy (ustawianie lameli) odbywa się przez przytrzymanie klawisza „zmiana kanału” przez ok. 3 sekundy. Dioda kanału zacznie migać. Aby spowodować obrót lameli należy nacisnąć klawisz „góra” lub „dół”. Powrót

do trybu normalnej pracy odbywa się w ten sam sposób, czyli poprzez naciśnięcie na ok. 3 sekundy klawisza „zmiana kanału”.

UWAGA: Aby lamelki w żaluzji mogły być ustawiane, żaluzja musi stać. Jeżeli żaluzja nie ustawia lamelek z pilota, to należy przed ustawieniem lamelek wcisnąć klawisz „stop”.


4. PIERWSZE REJESTROWANIE DO NAPĘDU RADIOWEGO/ STEROWNIKA ST-01RL

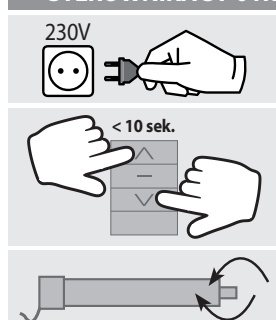

4.1 Wybierz numer kanału na pilocie. Podłącz do napędu/sterownika napięcie zasilania 230 VAC.


4.2 W ciągu 10 sekund naciśnij jednocześnie (krótko) klawisze „góra” i „dół” na pilocie.

4.3 Napęd wykona ruch w górę i w dół.

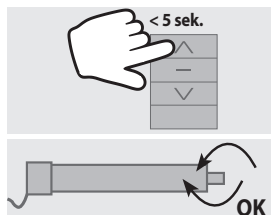

UWAGA: Procedura spowoduje wykasowanie z pamięci napędu/sterownika wszystkich pilotów, jakie wcześniej były zarejestrowane.

5. PIERWSZE REJESTROWANIE DO STEROWNIKA ST-01R

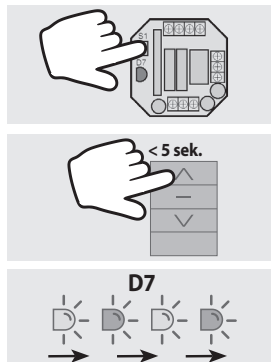

4.4 W ciągu 5 sekund krótko naciśnij klawisz „góra” na pilocie.

4.5 Krótki ruch w górę i w dół potwierdzi prawidłowość rejestracji.


5.1 Wybierz numer kanału na pilocie. Naciśnij raz krótko przycisk programowania S1. Poczekaj aż dioda D7 zaświeci się jednostajnie na zielono.

5.2 W ciągu 5 sekund krótko naciśnij klawisz „góra” na pilocie.

5.3 Sterownik zasygnalizuje rejestrację pilota mrugnięciem diody D7 na czerwono i zielono.

6. DODAWANIE KOLEJNYCH PILOTÓW DO NAPĘDU RADIOWEGO/STEROWNIKA ST-01R/ST-01RL

Gdy dysponujemy już zarejestrowanym pilotem, kolejne piloty rejestrujemy bez wyłączania zasilania. Przy użyciu zarejestrowanego wcześniej pilota należy wprowadzić napęd/sterownik w tryb programowania.

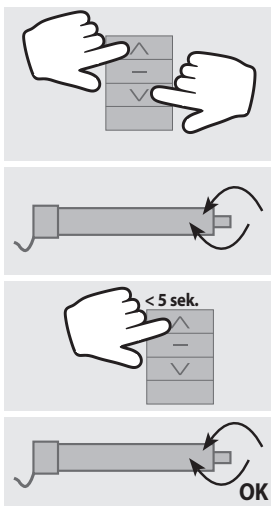


6.1 Wybierz numer kanału, który chcesz zaprogramować na **nowym pilocie**. Naciśnij jednocześnie (krótko) klawisze „góra” i „dół” **wcześniej zarejestrowanego pilota**.

6.2 Napęd wykona ruch w górę i w dół.

6.3 W ciągu 5 sekund krótko naciśnij klawisz „góra” **nowego pilota**.

6.4 Napęd wykona serię krótkich ruchów w górę i w dół potwierdzając rejestrację kolejnego kanału.

7. WYMIANA BATERII



Pilot jest zasilany z dwóch baterii 1,5 V typu AAA. Aby wymienić baterię trzeba zdjąć dolną pokrywę pilota i usunąć zużyte baterie. Baterie należy umieścić zgodnie z oznaczeniami na dnie pojemnika.



Zużytych baterii lub akumulatorów nie wolno wyrzucać razem z odpadami z gospodarstwa domowego. Użytkownik jest zobowiązany przekazać wszystkie zużyte urządzenia elektroniczne i elektryczne do specjalnego punktu zbiórki odpadów w celu ich wtórnego przetworzenia.



Five channel remote control PIL-05DW



- Key "up"
Key "stop"
Key "down"
Key "change channel"

1. ACTIVATING THE BLINDS

To activate the motion of a particular motor, press the key "up" (open) or the key "down" (close). You can stop the motor with the key "stop" at any moment. After approximately 5 seconds of being idle (no key operation) the remote control enters the stand-by mode (low battery consumption mode). The remote control remains in the stand-by mode by default, any key operation enters the operation mode and causes its readiness to work (the channel number appears; the remote control will not execute any operation), only pressing a key for the second time will execute a command.

2. CHOOSING THE CHANNEL

You can select a single channel or all channels at the same time (highlighting all diodes). The channel is selected by pressing the "change channel" key. The illuminated LED indicates the selected channel.

3. ACTIVATING THE VENETIAN BLINDS




To enter the Venetian blind mode (slat tilting), press and hold the "change channel" key for 3 seconds (corresponding channel LED will blink). To cause the slats to tilt, press the key "up" or "down". To return to standard operation


repeat the routine i.e. press and hold the "change channel" key for approximately 3 seconds.

NOTICE: For the slats of the blind to be adjusted, the blind must be stationary. If the slats cannot be adjusted using the remote control, press the "stop" button before attempting to adjust the slats.

4. FIRST PROGRAMMING WITH RADIO CONTROLLED MOTORS AND ST-01RL CONTROLLER UNITS

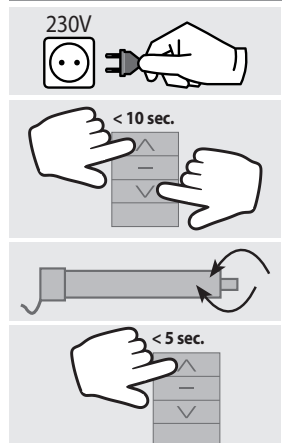


- 4.1 Choose the channel on the remote control and connect 230 VAC power to a particular motor/controller.
- 4.2 Within 10 seconds of the power being switched on, briefly press the "up" and "down" keys of the remote control simultaneously.
- 4.3 The motor will execute the movement up and down.
- 4.4 Briefly press the "up" key of the remote control within the next 5 seconds.



- 4.5 Short movement up and down will confirm proper registration.

NOTE: The procedure will erase from the drive's memory all remote controls that were previously registered.


5. PROGRAMMING THE ST-01R CONTROLLER UNIT

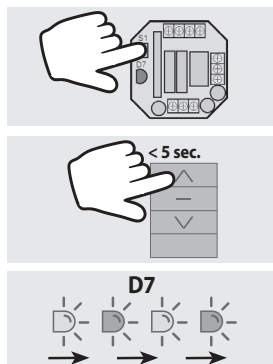

- 5.1 Choose a channel on the remote control and press programming button S1 - the LED flashes and lights up with a green steady light.
- 5.2 Then briefly press the "up" key of the remote control.
- 5.3 The controller will signal the registration of the remote control by blinking red and green LEDs.


6. WITH THE USE OF A REGISTERED REMOTE CONTROL

Register further remote controls without switching off the power supply. Using the previously registered remote control, enter the motor/controller into programming mode.

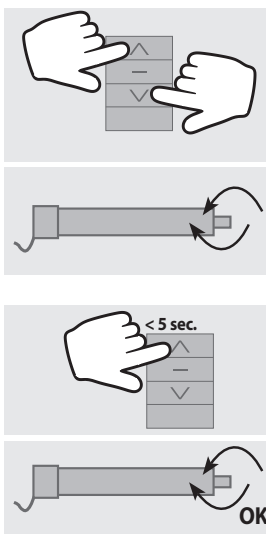

- 6.1 Choose a channel on the **new remote control**. Briefly press simultaneously the keys "up" and "down" of the **registered remote control**.
- 6.2 The motor makes an up and down movement.
- 6.3 In the next 5 seconds, briefly press the "up" key of a **new remote control**.
- 6.4 The motor will make a series of short up and down movements confirming the registration of the next channel.

7. CHANGING THE BATTERIES

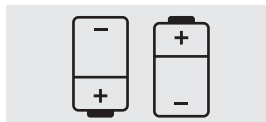

The remote control is powered by two 1,5 V AAA type batteries. To replace the batteries, push back the bottom cover of the remote control. Insert the batteries observing the markings on the bottom of the compartment.



It is forbidden to place used equipment together with other waste. Dispose of in a specially designated place. The household plays an important role in the waste equipment recycling system. By properly separating waste, including waste equipment and batteries, households ensure that waste equipment does not end up in municipal waste but in a specially designated place and, after recycling, can be used as a raw material for reuse.

Przedsiębiorstwo Informatyczno-Elektroniczne INEL Sp. z o.o., ul. Mostowa 1, 80-778 Gdańsk declares that the pilot described in this manual complies with Directive 2014/53/EU. The full text of the EU Declaration of Conformity is available at the following web address: www.inel.gda.pl.

