

Pilot jednokanałowy PIL – 01DW




Klawisz „góra”

Klawisz „stop”

Klawisz „dół”

3. PIERWSZE REJESTROWANIE DO STEROWNIKA ST-01R

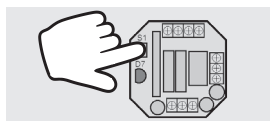

3.1 Naciśnij raz krótko przycisk programowania S1. Poczekaj aż dioda D7 zaświeci się jednostajnie na zielono.




3.2 W ciągu 5 sekund krótko naciśnij klawisz „góra” na pilocie.




3.3 Sterownik zasygnalizuje rejestrację pilota mrugnięciem diody D7 na czerwono i zielono.

4. DODAWANIE KOLEJNYCH PILOTÓW DO NAPĘDU RADIOWEGO/STEROWNIKA ST-01R/ST-01RL


Gdy dysponujemy już zarejestrowanym pilotem, kolejne piloty rejestrujemy bez wyłączania zasilania. Przy użyciu zarejestrowanego wcześniej pilota należy wprowadzić napęd/sterownik w tryb programowania.

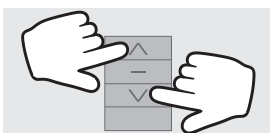


4.1 Naciśnij jednocześnie (krótko) klawisze „góra” i „dół” **wcześniej zarejestrowanego pilota.**



4.2 Napęd wykona ruch w górę i w dół.

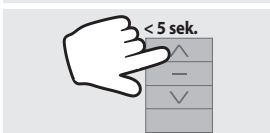


4.3 W ciągu 5 sekund krótko naciśnij klawisz „góra” **nowego pilota.**



4.4 Napęd wykona serię krótkich ruchów w górę i w dół potwierdzając rejestrację kolejnego pilota.

5. WYMIANA BATERII



Pilot jest zasilany z dwóch baterii 1,5 V typu AAA. Aby wymienić baterię trzeba zdjąć dolną pokrywę pilota i usunąć zużyte baterie. Baterie należy umieścić zgodnie z oznaczeniami na dnie pojemnika

1. URUCHAMIANIE ROLET

Aby rozpocząć ruch napędu, należy nacisnąć klawisz „góra” (otwieranie) lub klawisz „dół” (zamykanie). Napęd możemy zatrzymać klawiszem „stop” w dowolnym momencie.

2. PIERWSZE REJESTROWANIE DO NAPĘDU RADIOWEGO/STEROWNIKA ST-01RL




2.1 Podłącz do napędu/sterownika napięcie zasilania 230 VAC.



2.2 W ciągu 10 sekund naciśnij jednocześnie (krótko) klawisze „góra” i „dół” na pilocie.



2.3 Napęd wykona ruch w górę i w dół.

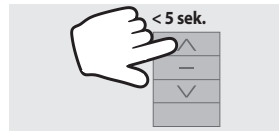

2.4 W ciągu 5 sekund krótko naciśnij klawisz „góra” na pilocie.



2.5 Krótki ruch w górę i w dół potwierdzi prawidłowość rejestracji.

UWAGA: Procedura spowoduje wykasowanie z pamięci napędu/sterownika wszystkich pilotów, jakie wcześniej były zarejestrowane.



Zużytych baterii lub akumulatorów nie wolno wyrzucać razem z odpadami z gospodarstwa domowego. Użytkownik jest zobowiązany przekazać wszystkie zużyte urządzenia elektroniczne i elektryczne do specjalnego punktu zbiórki odpadów w celu ich wtórnego przetworzenia.



One channel remote control PIL-01DW




Key "up"


Key "stop"

Key "down"

3. PROGRAMMING THE ST-01R CONTROLLER UNIT

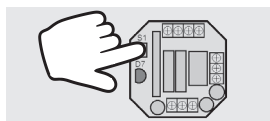

3.1 Press programming button S1 - the LED flashes and lights up with a green steady light.

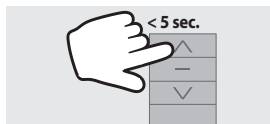


3.2 Then briefly press the „up” key of the remote control.




3.3 The controller will signal the registration of the remote control by blinking red and green LEDs.

4. WITH THE USE OF A REGISTERED REMOTE CONTROL


Other remote controls are registered without turning off the power. With the use of a registered remote control enter the programming mode of a motor/controller.

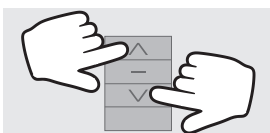


4.1 Briefly press simultaneously the keys „up” and „down” of the **registered remote control**.



4.2 The motor makes an up and down movement.

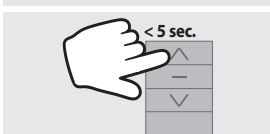


4.3 Within the next 5 seconds, briefly press the „up” key of a **new remote control**.



4.4 The motor will make a series of short up and down movements confirming the registration of another remote control.

5. CHANGING THE BATTERIES

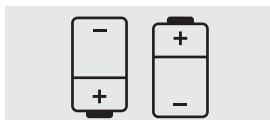

The remote control is powered by two 1,5 V AAA type batteries. To replace the batteries, push back the bottom cover of the remote control. Insert the batteries observing the markings on the bottom of the compartment.


1. ACTIVATING THE BLINDS

To activate the motion of a particular motor, press the key „up” (open) or the key „down” (close). You can stop the motor with the key „stop” at any moment.


2. FIRST PROGRAMMING WITH RADIO CONTROLLED MOTORS AND ST-01RL CONTROLLER UNITS




2.1 Connect a 230 VAC power supply to the drive/controller.

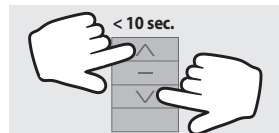

2.2 Within 10 seconds of the power being switched on, briefly press the „up” and „down” keys of the remote control simultaneously.



2.3 The motor will execute the movement up and down.

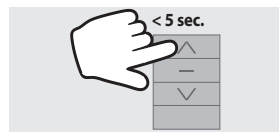

2.4 Briefly press the „up” key of the remote control within the next 5 seconds.



2.5 Short movement up and down will confirm proper registration.

NOTICE: This procedure will reset the motor and erase all the previously registered remote controls.



It is forbidden to place used equipment together with other waste. Dispose of in a specially designated place. The household plays an important role in the waste equipment recycling system. By properly separating waste, including waste equipment and batteries, households ensure that waste equipment does not end up in municipal waste but in a specially designated place and, after recycling, can be used as a raw material for reuse.

Przedsiębiorstwo Informatyczno-Elektroniczne INEL Sp. z o.o., ul. Mostowa 1, 80-778 Gdańsk declares that the pilot described in this manual complies with Directive 2014/53/EU. The full text of the EU Declaration of Conformity is available at the following web address: www.inel.gda.pl.

