


Pilot pięciokanałowy PIL – 05DL

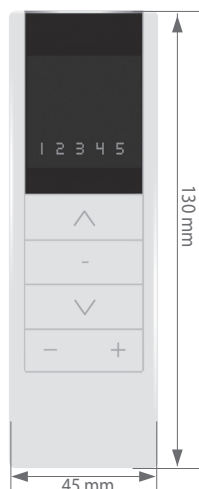

- Klawisz „góra”
Klawisz „stop”
Klawisz „dół”
Klawisz „minus”
Klawisz „plus”

1. URUCHAMIANIE ROLET

Aby rozpocząć ruch napędu, należy nacisnąć klawisz „góra” (otwieranie) lub klawisz „dół” (zamykanie). Napęd możemy zatrzymać klawiszem „stop” w dowolnym momencie. Po około 5 sekundach bezczynności (brak naciśnięcia klawiszy) pilot przechodzi w stan uśpienia (zmniejszonego poboru prądu z baterii).

Pilot standardowo jest w stanie uśpienia, naciśnięcie dowolnego klawisza powoduje wybudzenie i przygotowanie do pracy (wyświetli się numer kanału, pilot nie wykona w tym momencie żadnej innej operacji). Dopiero drugie naciśnięcie klawisza spowoduje wykonanie polecenia.

2. WYBÓR KANAŁU

Wyboru kanału dokonujemy używając klawisza „plus” lub „minus”. Można wybrać numer pojedynczego kanału lub wszystkich kanałów jednocześnie. Na kanale wspólnym zaświecą się wszystkie diody jednocześnie.

3. URUCHAMIANIE TRYBU ŻALUZJOWEGO



Przejęcie w tryb żaluzjowy (ustawianie lameli) odbywa się przez przytrzymanie klawisza „plus” lub klawisza „minus” przez ok. 3 sekundy. Numer kanału zacznie migać. Aby spowodować obrót lameli należy nacisnąć klawisz „góra”

lub „dół”. Powrót do trybu normalnej pracy odbywa się w ten sam sposób, czyli poprzez naciśnięcie na ok. 3 sekundy klawisza „plus” lub klawisza „minus”.

UWAGA: Aby lamelki w żaluzji mogły być ustawiane, żaluzja musi stać. Jeżeli żaluzja nie ustawia lamelek z pilota, to należy przed ustawieniem lamelek wcisnąć klawisz „stop”.


4. PIERWSZE REJESTROWANIE DO NAPĘDU RADIOWEGO/ STEROWNIKA ST-01RL



4.1 Wybierz numer kanału na pilocie. Podłącz do napędu/sterownika napięcie zasilania 230 VAC.




4.2 W ciągu 10 sekund naciśnij jednocześnie (krótko) klawisze „góra” i „dół” na pilocie.



4.3 Napęd wykona ruch w górę i w dół.




4.4 W ciągu 5 sekund krótko naciśnij klawisz „góra” na pilocie.



4.5 Krótki ruch w górę i w dół potwierdzi prawidłowość rejestracji.

UWAGA: Procedura spowoduje wykasowanie z pamięci napędu/sterownika wszystkich pilotów, jakie wcześniej były zarejestrowane.

5. PIERWSZE REJESTROWANIE DO STEROWNIKA ST-01R

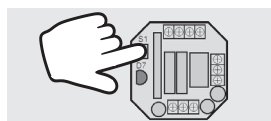

5.1 Wybierz numer kanału na pilocie. Naciśnij raz krótko przycisk programowania S1. Poczekaj aż dioda D7 zaświeci się jednostajnie na zielono.



5.2 W ciągu 5 sekund krótko naciśnij klawisz „góra” na pilocie.




5.3 Sterownik zasygnalizuje rejestrację pilota mrugnięciem diody D7 na czerwono i zielono.

6. DODAWANIE KOLEJNYCH PILOTÓW DO NAPĘDU RADIOWEGO/STEROWNIKA ST-01R/ST-01RL

Gdy dysponujemy już zarejestrowanym pilotem, kolejne piloty rejestrujemy bez wyłączania zasilania. Przy użyciu zarejestrowanego wcześniej pilota należy wprowadzić napęd/sterownik w tryb programowania.




6.1 Wybierz numer kanału, który chcesz zaprogramować na **nowym pilocie**. Naciśnij jednocześnie (krótko) klawisze „góra” i „dół” **wcześniej zarejestrowanego pilota**.



6.2 Napęd wykona ruch w górę i w dół.




6.3 W ciągu 5 sekund krótko naciśnij klawisz „góra” **nowego pilota**.



6.4 Napęd wykona serię krótkich ruchów w górę i w dół potwierdzając rejestrację kolejnego kanału.

7. WYMIANA BATERII

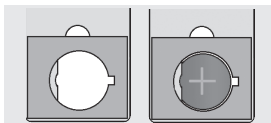


Pilot jest zasilany z baterii 3 V typu CR2430. Aby wymienić baterię trzeba zdjąć pokrywkę na dole pilota i usunąć zużytą baterię. Nową baterię należy umieścić „plusem” do góry.



Zużytych baterii lub akumulatorów nie wolno wyrzucać razem z odpadami z gospodarstwa domowego. Użytkownik jest zobowiązany przekazać wszystkie zużyte urządzenia elektroniczne i elektryczne do specjalnego punktu zbiórki odpadów w celu ich wtórnego przetworzenia.



Five channel remote control PIL-05DL

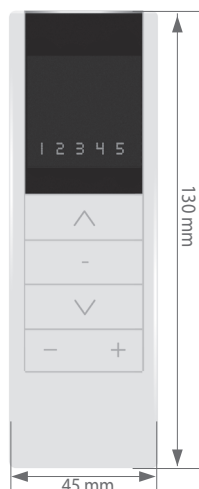

- Key "up"
- Key "stop"
- Key "down"
- Key "minus"
- Key "plus"

1. ACTIVATING THE BLINDS

To activate the motion of a particular motor, press the key "up" (open) or the key "down" (close). You can stop the motor with the key "stop" at any moment. After approximately 5 seconds of being idle (no key operation) the remote control enters the stand-by mode (low battery consumption mode).

The remote control remains in the stand-by mode by default, any key operation enters the operation mode and causes its readiness to work (the channel number appears; the remote control will not execute any operation), only pressing a key for the second time will execute a command.

2. CHOOSING THE CHANNEL

It is possible to choose a single channel number or all the channels simultaneously (all LED will lit). To choose a channel, press the key "plus" or "minus".

3. ACTIVATING THE VENETIAN BLINDS




To enter the Venetian blind mode (slat tilting), press and hold the key "plus" or the key "minus" for 3 seconds (corresponding channel LED will blink). To cause the slats to tilt, press the key "up" or "down". To return to standard

operation repeat the routine i.e. press and hold the key "plus" or the key "minus" for approximately 3 seconds.

NOTICE: For the slats of the blind to be adjusted, the blind must be stationary. If the slats cannot be adjusted using the remote control, press the "stop" button before attempting to adjust the slats.


4. FIRST PROGRAMMING WITH RADIO CONTROLLED MOTORS AND ST-01RL CONTROLLER UNITS

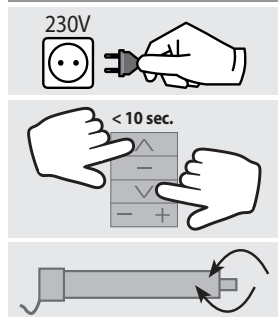

4.1 Choose the channel on the new remote control and connect 230 VAC power to a particular motor/controller.


4.2 In the next 10 seconds after turning on the power, simultaneously short press the keys "up" and "down" of the remote control,

4.3 The motor will execute the movement up and down.

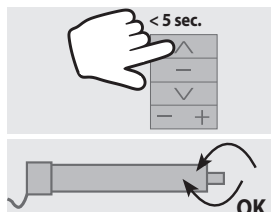

NOTICE: This procedure will reset the motor and erase all the previously registered remote controls.

5. PROGRAMMING THE ST-01R CONTROLLER UNIT

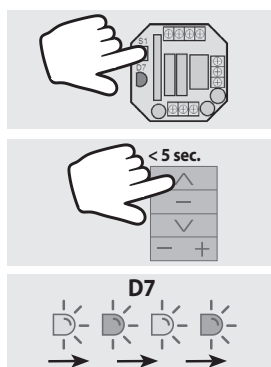

4.4 In the next 5 seconds short press the key "up".

4.5 Short movement up and down will confirm proper registration.


5.1 Choose a channel on the remote control and press the programming key S1 – the diode will flash once and will glow permanently.

5.2 Next short press the key "up" of the remote control.

5.3 The controller will signalise the registration of the remote control with the diode flashing green and red.

6. WITH THE USE OF A REGISTERED REMOTE CONTROL

Other remote controls are registered without turning off the power. With the use of a registered remote control enter the programming mode of a motor/controller:

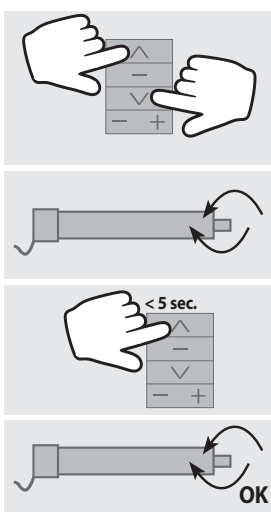


6.1 Choose a channel on the **new remote control**. Briefly press simultaneously the keys "up" and "down" of a **registered remote control**.

6.2 The motor will execute the movement up and down.

6.3 In the next 5 seconds briefly press the key "up" of a **new remote control**.

6.4 The motor will execute a series of short movements up and down confirming the registration of another channel.

7. CHANGING THE BATTERIES

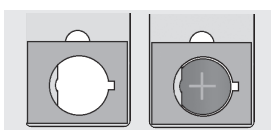

The remote control is powered by one 3V button cell battery type CR2430. To change the battery, remove the cover at the bottom of the remote control. Replace with a new battery, with the plus (+) symbol facing up.



It is forbidden to place used equipment together with other waste. Dispose of in a specially designated place. The household plays an important role in the waste equipment recycling system. By properly separating waste, including waste equipment and batteries, households ensure that waste equipment does not end up in municipal waste but in a specially designated place and, after recycling, can be used as a raw material for reuse.

Przedsiębiorstwo Informatyczno-Elektroniczne INEL Sp. z o.o., ul. Mostowa 1, 80-778 Gdańsk declares that the pilot described in this manual complies with Directive 2014/53/EU. The full text of the EU Declaration of Conformity is available at the following web address: www.inel.gda.pl.

